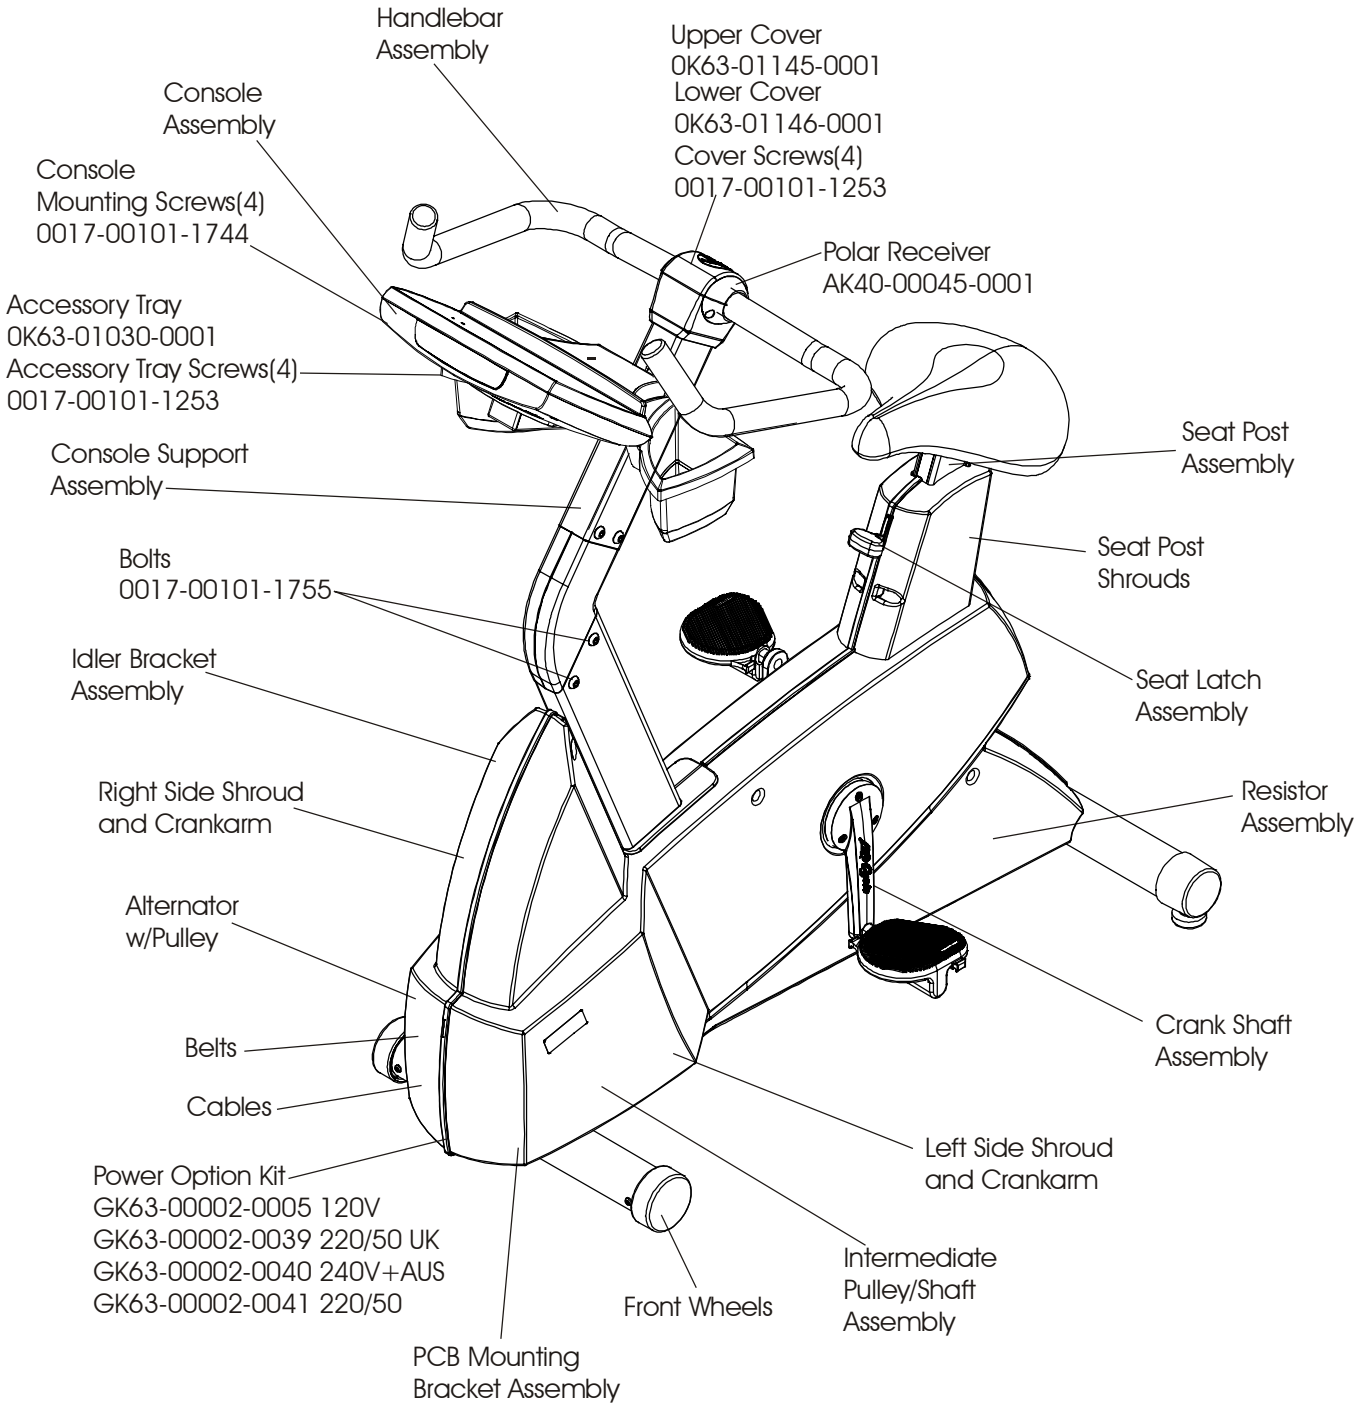

Description	Part Number
Service Manual	M051-00K63-A009
Operator Manual	M051-00K63-A064
Hardware Bag	GK63-00002-0044

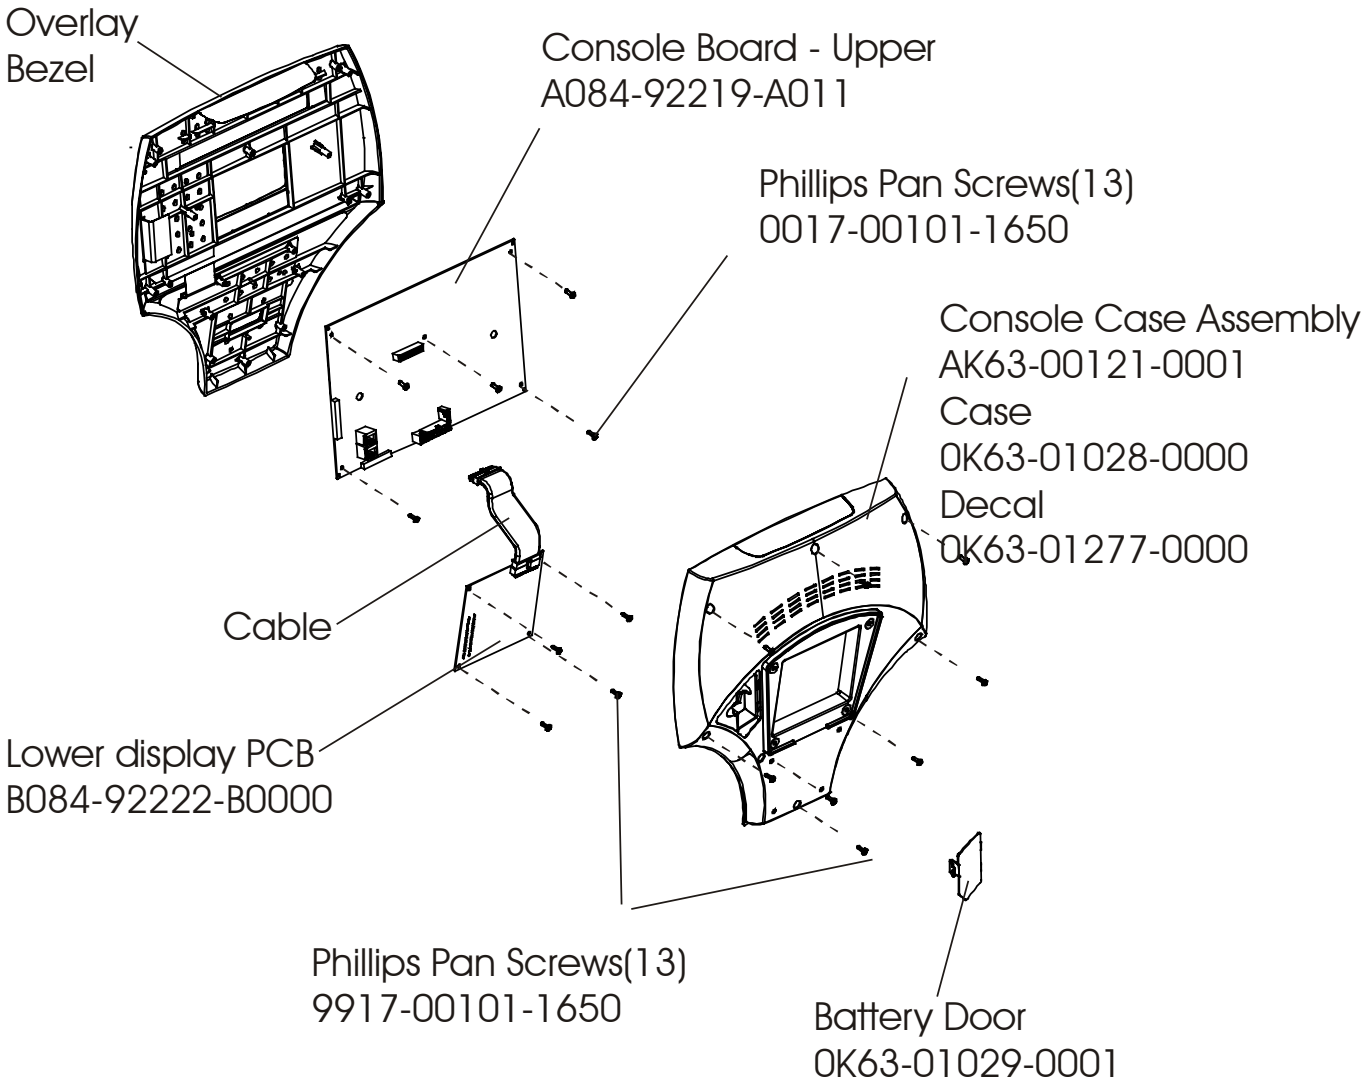

Console Assembly	Overlay Bezel
AK63-00160-0001 Eng Met	AK63-00165-0001 Eng Met
AK63-00160-0003 Ger Met	AK63-00165-0003 Ger Met
AK63-00160-0004 Spn Met	AK63-00165-0004 Spn Met
AK63-00160-0006 Jap Met	AK63-00165-0006 Jap Met
AK63-00160-0007 Frn Met	AK63-00165-0007 Frn Met
AK63-00160-0008 Itl Met	AK63-00165-0008 Itl Met
AK63-00160-0009 Dut Met	AK63-00165-0009 Dut Met
AK63-00160-0010 Por Met	AK63-00165-0010 Por Met

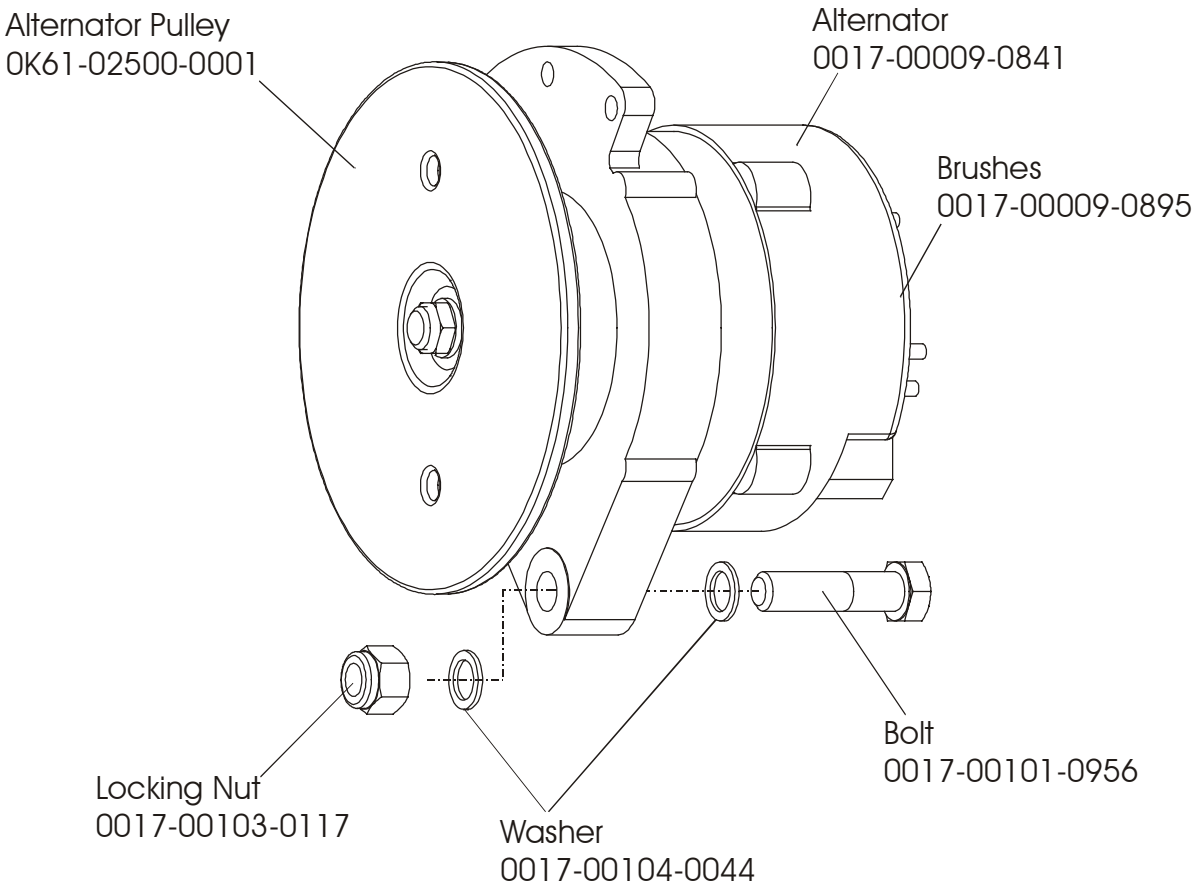
Alternator Pulley
0K61-02500-0001
Alternator
0017-00009-0841
Brushes
0017-00009-0895
Bolt
0017-00101-0956
Locking Nut
0017-00103-0117
Washer
0017-00104-0044

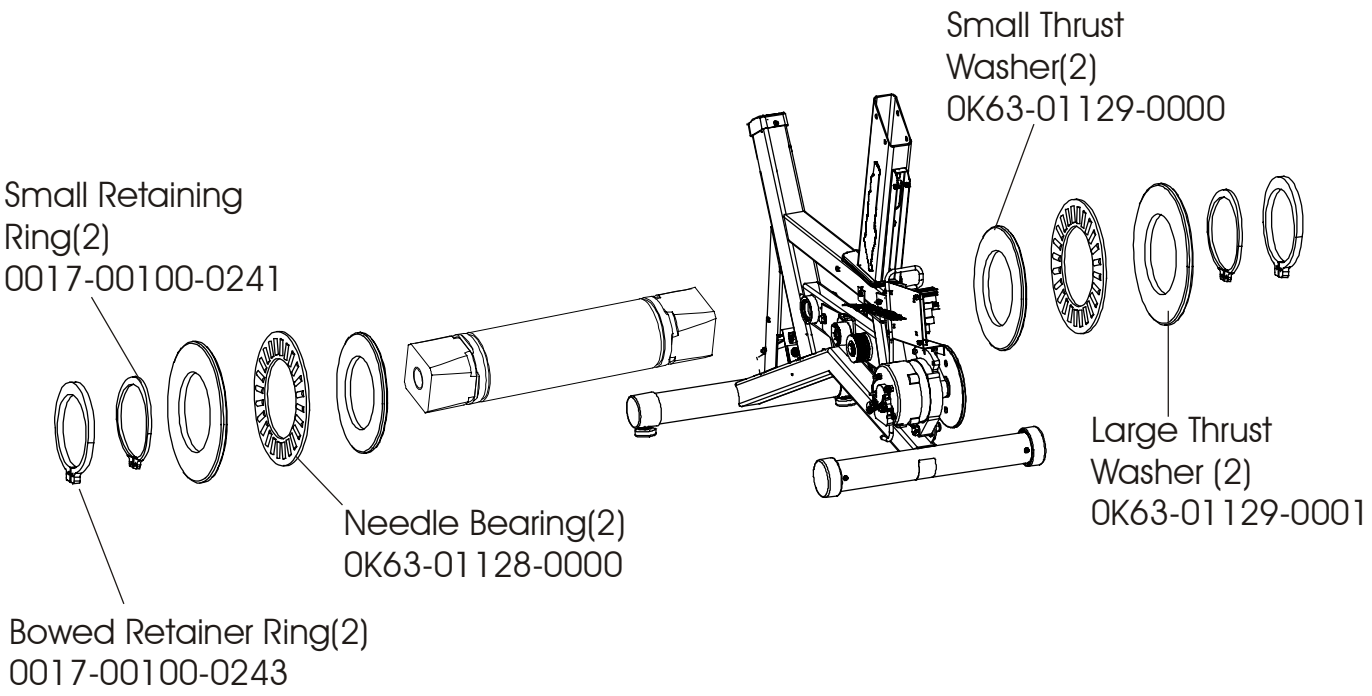

Crank Shaft & Bearing Kit - GK63-00002-0006
(All items on this page are included in the kit.)

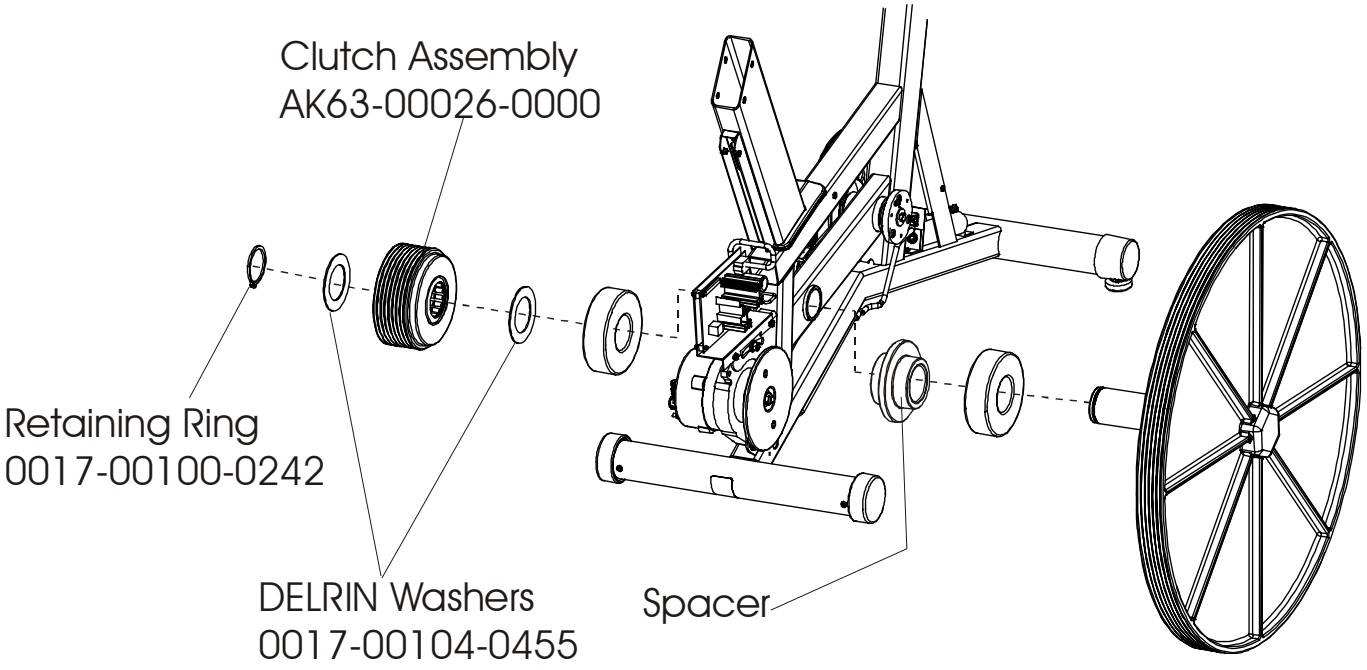

Intermediate Shaft & Bearing Kit - GK63-00002-0007
(All items on this page are included in the kit.)

Seat Latch Assy - AK63-00043-0001 **S/N LCI100001**

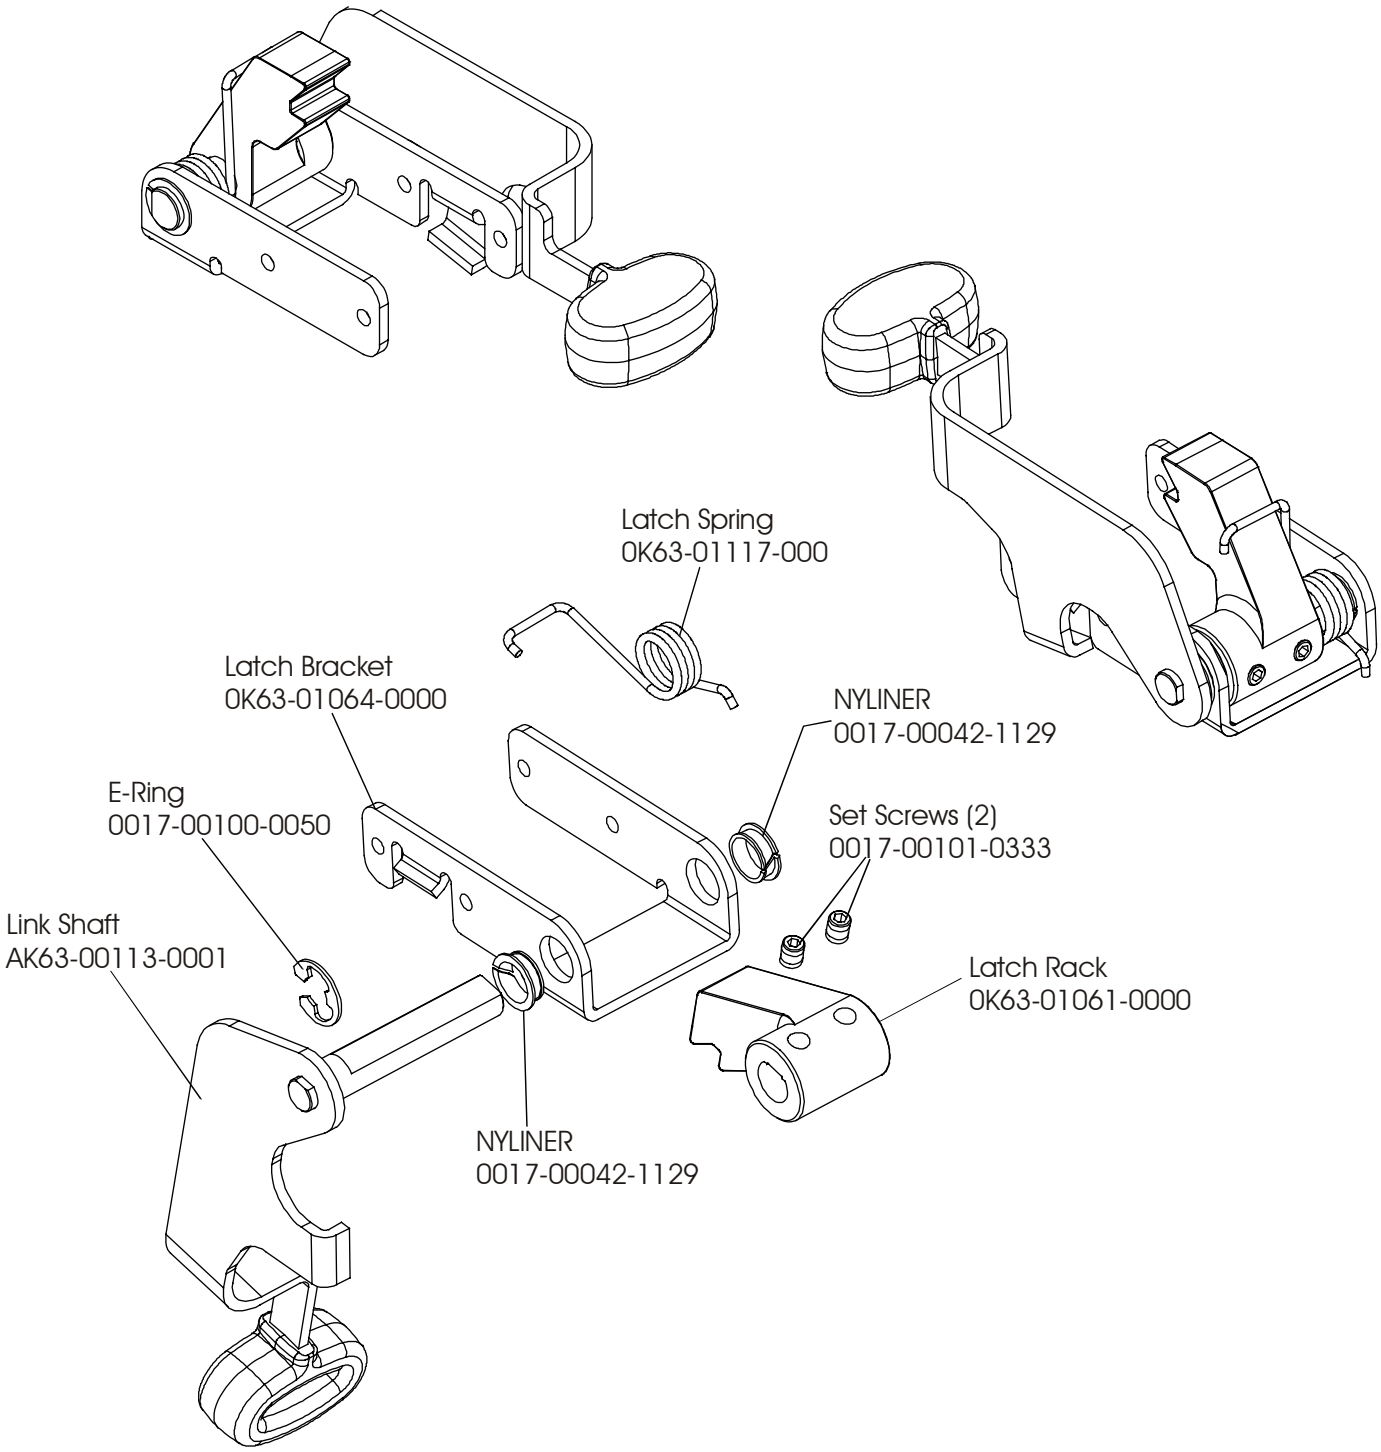

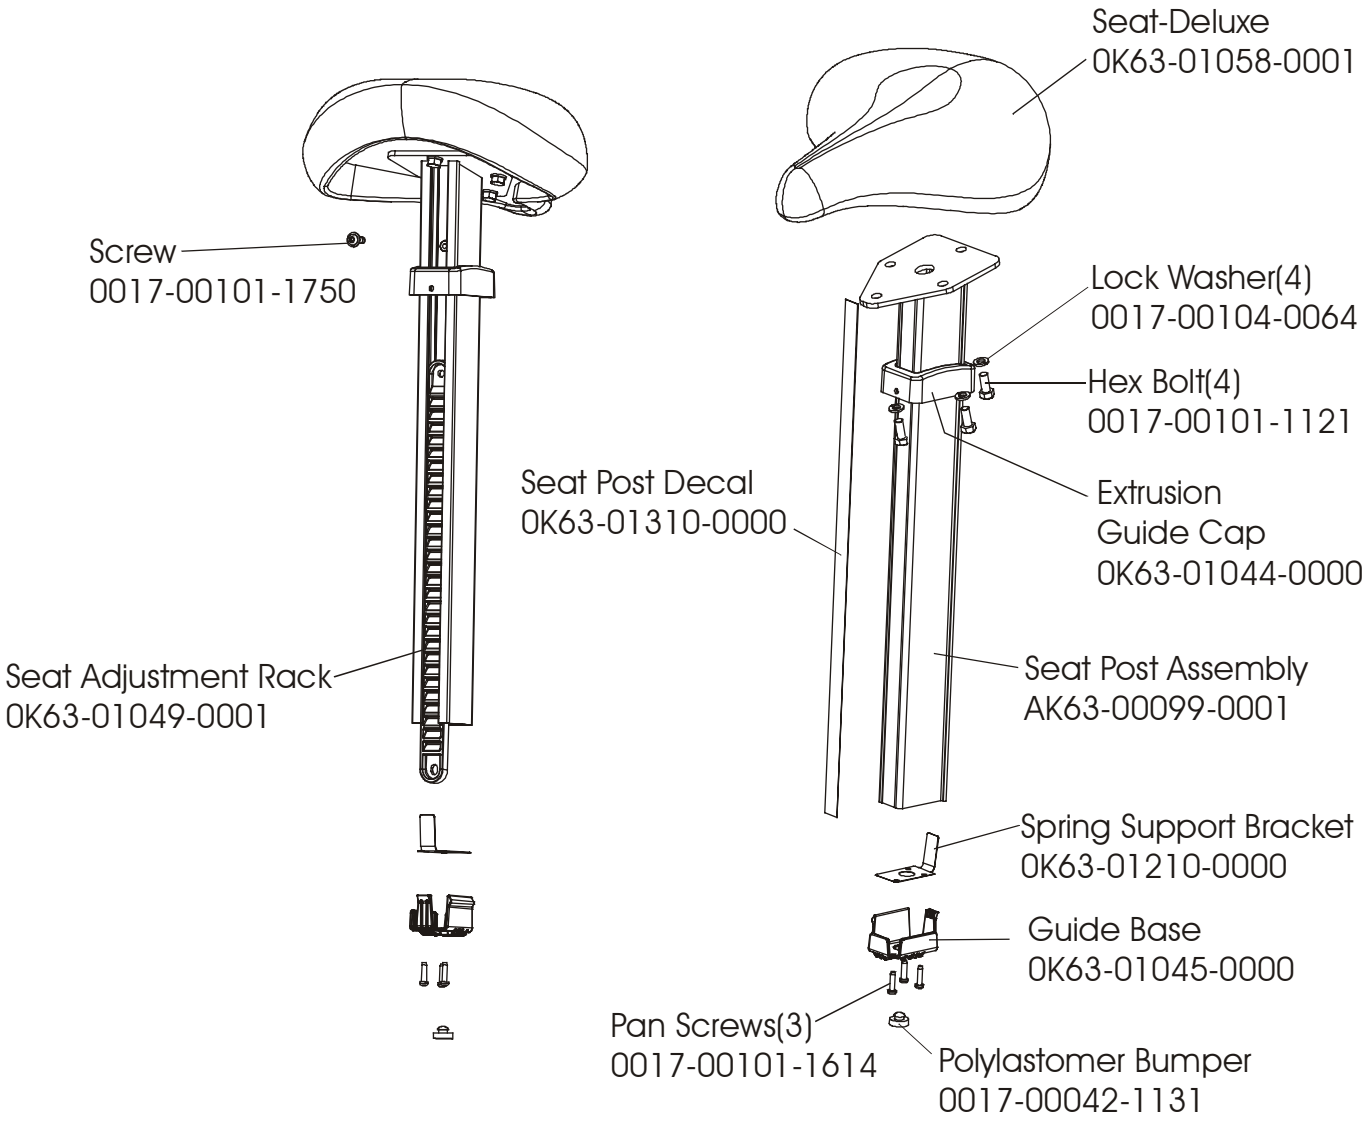
Seat-Deluxe
0K63-01058-0001
Screw
0017-00101-1750
Lock Washer(4)
0017-00104-0064
Hex Bolt(4)
0017-00101-1121
Seat Post Decal
0K63-01310-0000
Extrusion
Guide Cap
0K63-01044-0000
Seat Adjustment Rack
0K63-01049-0001
Seat Post Assembly
AK63-00099-0001
Spring Support Bracket
0K63-01210-0000
Guide Base
0K63-01045-0000
Pan Screws(3)
0017-00101-1614
Polylastomer Bumper
0017-00042-1131

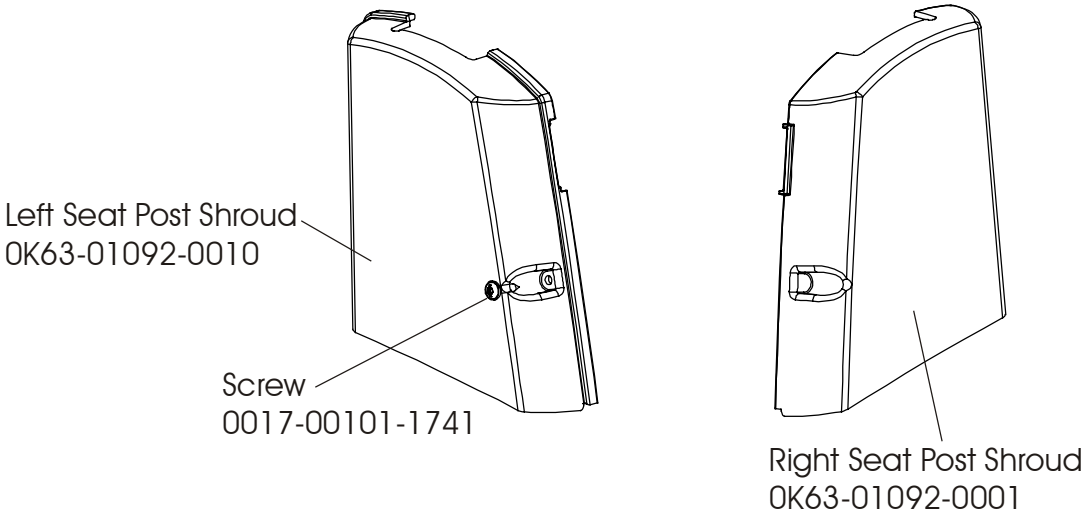
Left Seat Post Shroud
0K63-01092-0010
Screw
0017-00101-1741
Right Seat Post Shroud
0K63-01092-0001

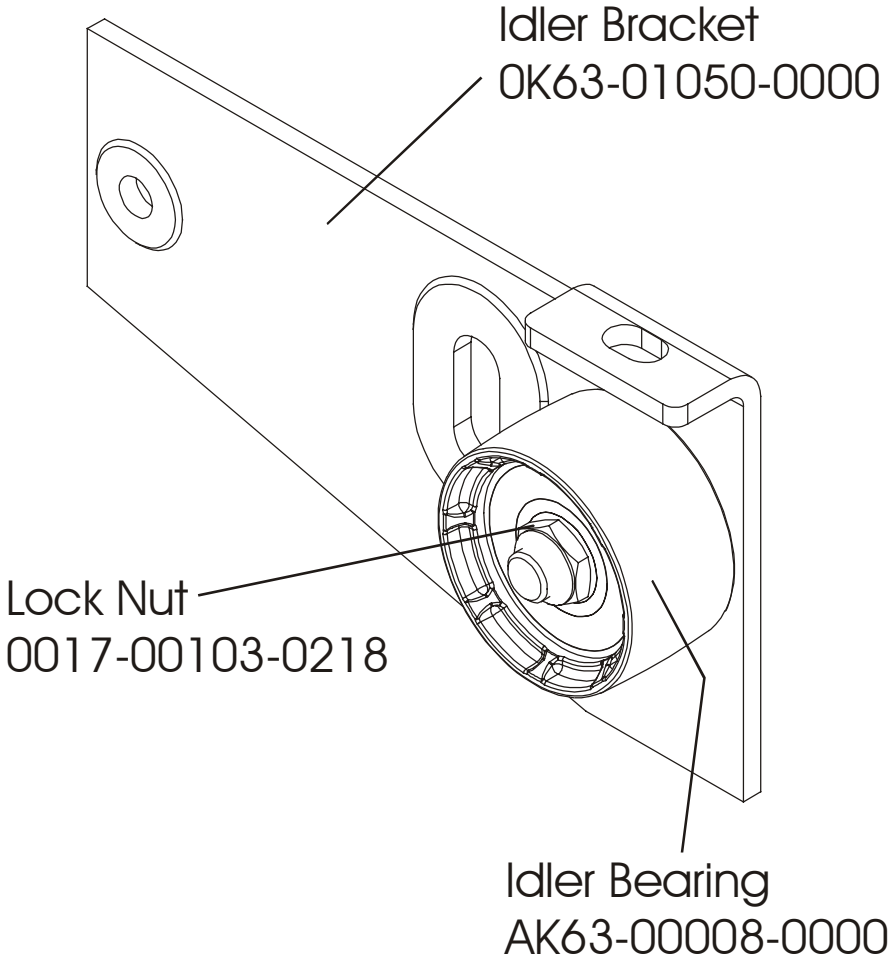
Idler Bracket
0K63-01050-0000
Lock Nut
0017-00103-0218
Idler Bearing
AK63-00008-0000

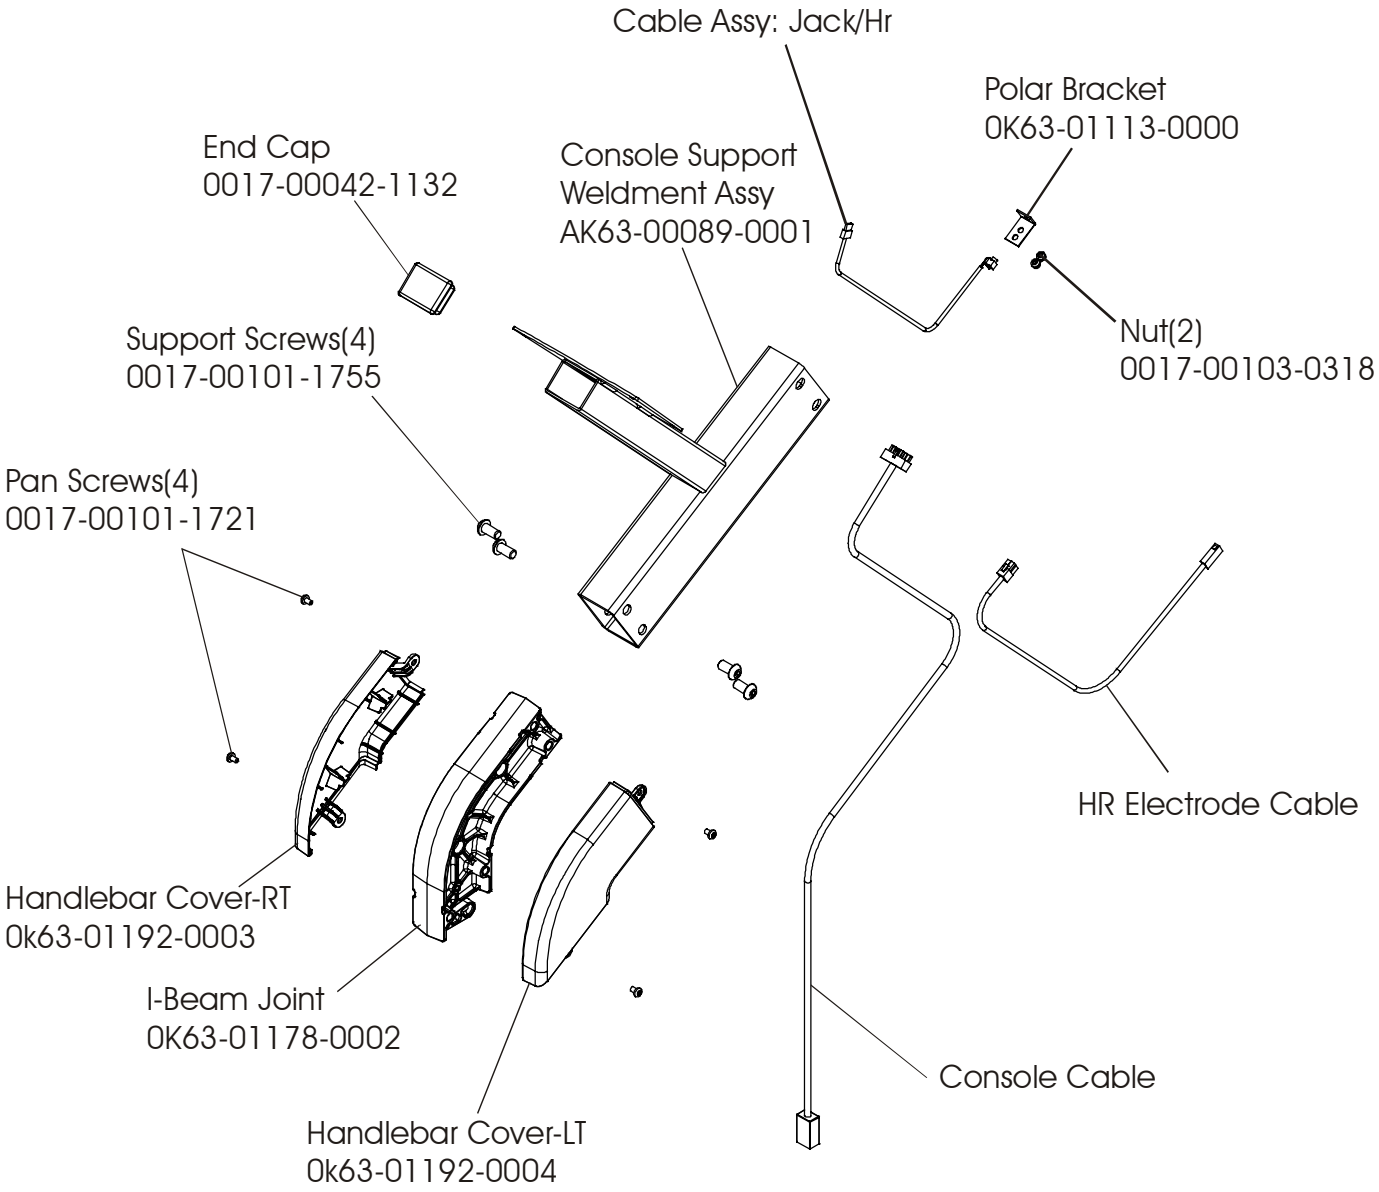
Cable Assy: Jack/Hr
Polar Bracket
0K63-01113-0000
End Cap
0017-00042-1132
Console Support
Weldment Assy
AK63-00089-0001
Nut(2)
0017-00103-0318
Support Screws(4)
0017-00101-1755
Pan Screws(4)
0017-00101-1721
HR Electrode Cable
Handlebar Cover-RT
0k63-01192-0003
I-Beam Joint
0K63-01178-0002
Console Cable
Handlebar Cover-LT
0k63-01192-0004

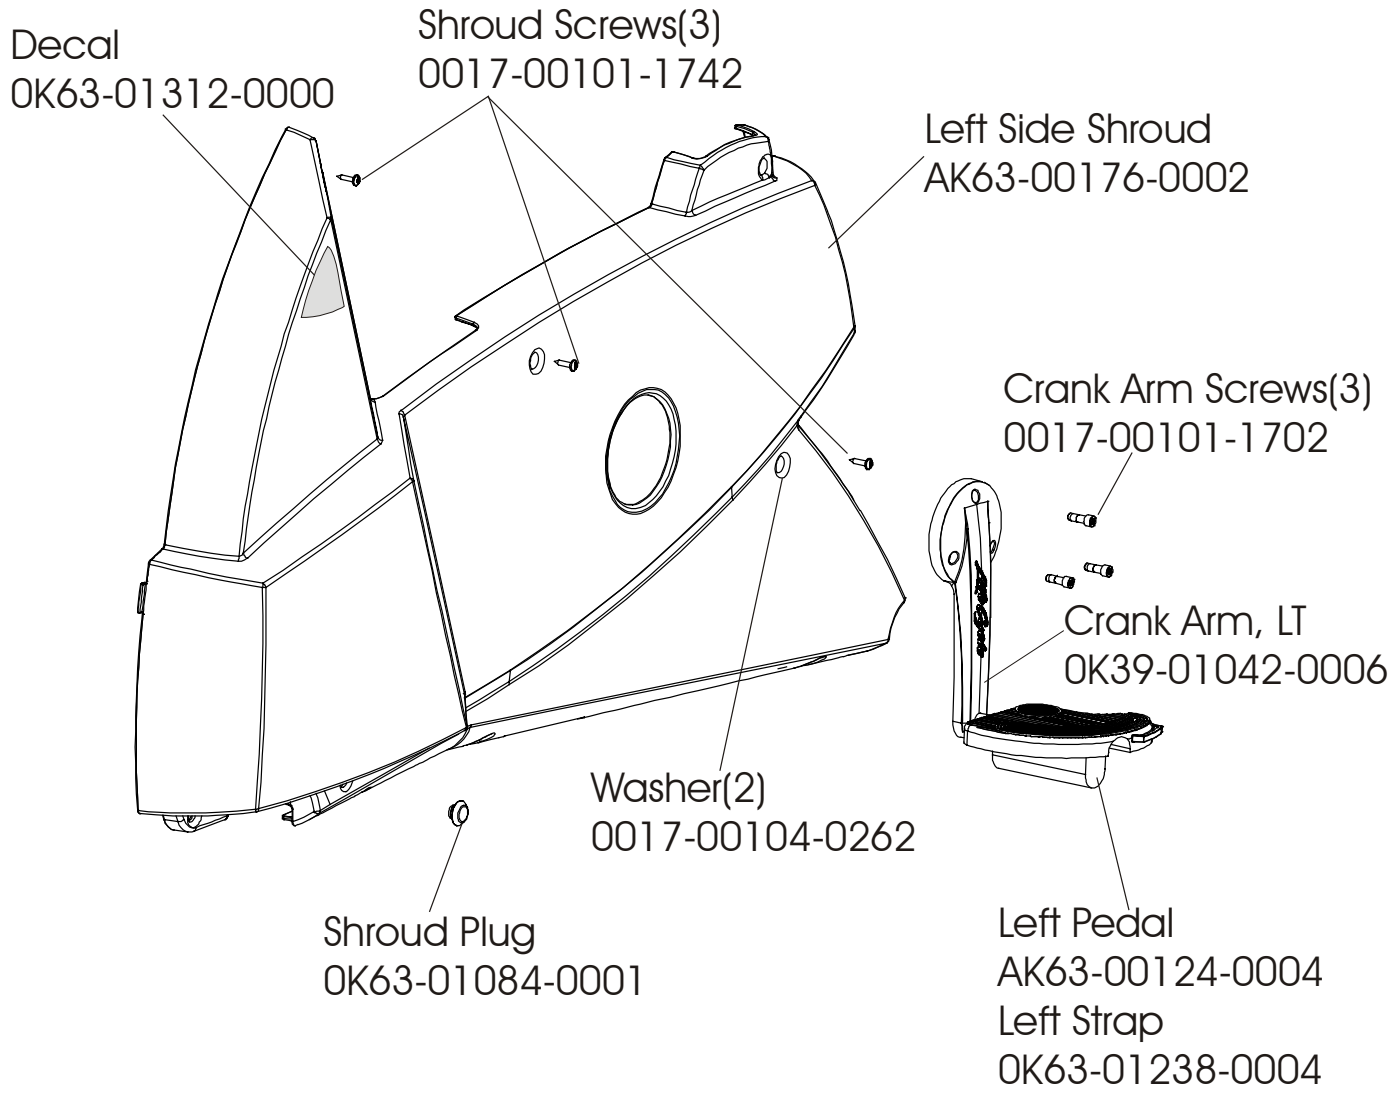
Decal
0K63-01312-0000
Shroud Screws(3)
0017-00101-1742
Left Side Shroud
AK63-00176-0002
Crank Arm Screws(3)
0017-00101-1702
Crank Arm, LT
0K39-01042-0006
Washer(2)
0017-00104-0262
Shroud Plug
0K63-01084-0001
Left Pedal
AK63-00124-0004
Left Strap
0K63-01238-0004

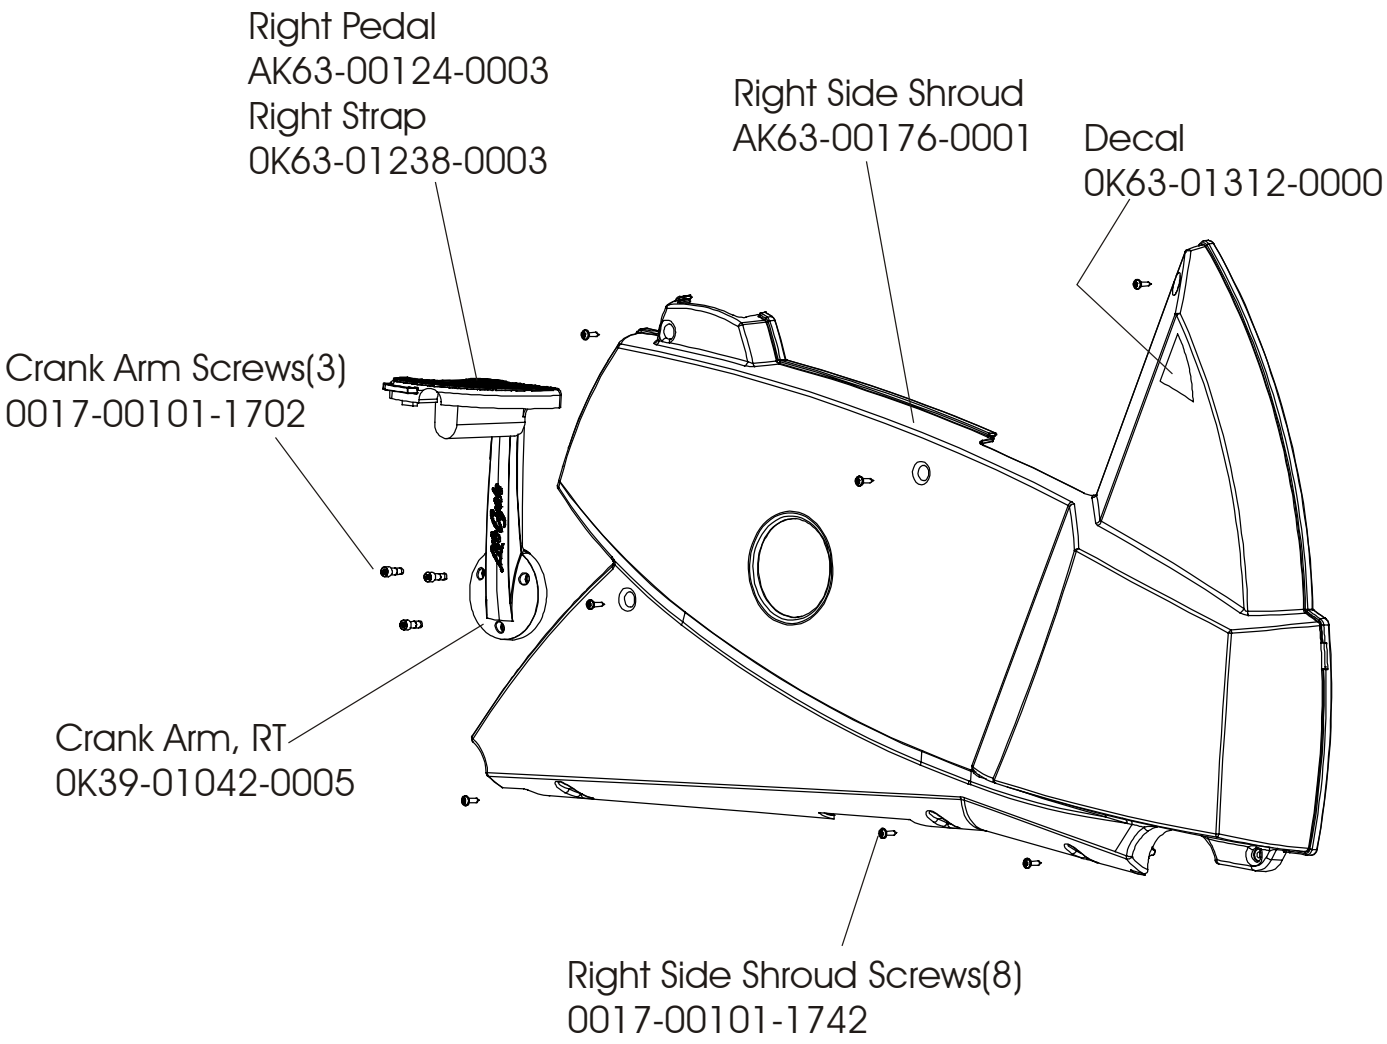
Right Pedal
AK63-00124-0003
Right Strap
0K63-01238-0003
Right Side Shroud
AK63-00176-0001
Decal
0K63-01312-0000
Crank Arm Screws(3)
0017-00101-1702
Crank Arm, RT
0K39-01042-0005
Right Side Shroud Screws(8)
0017-00101-1742

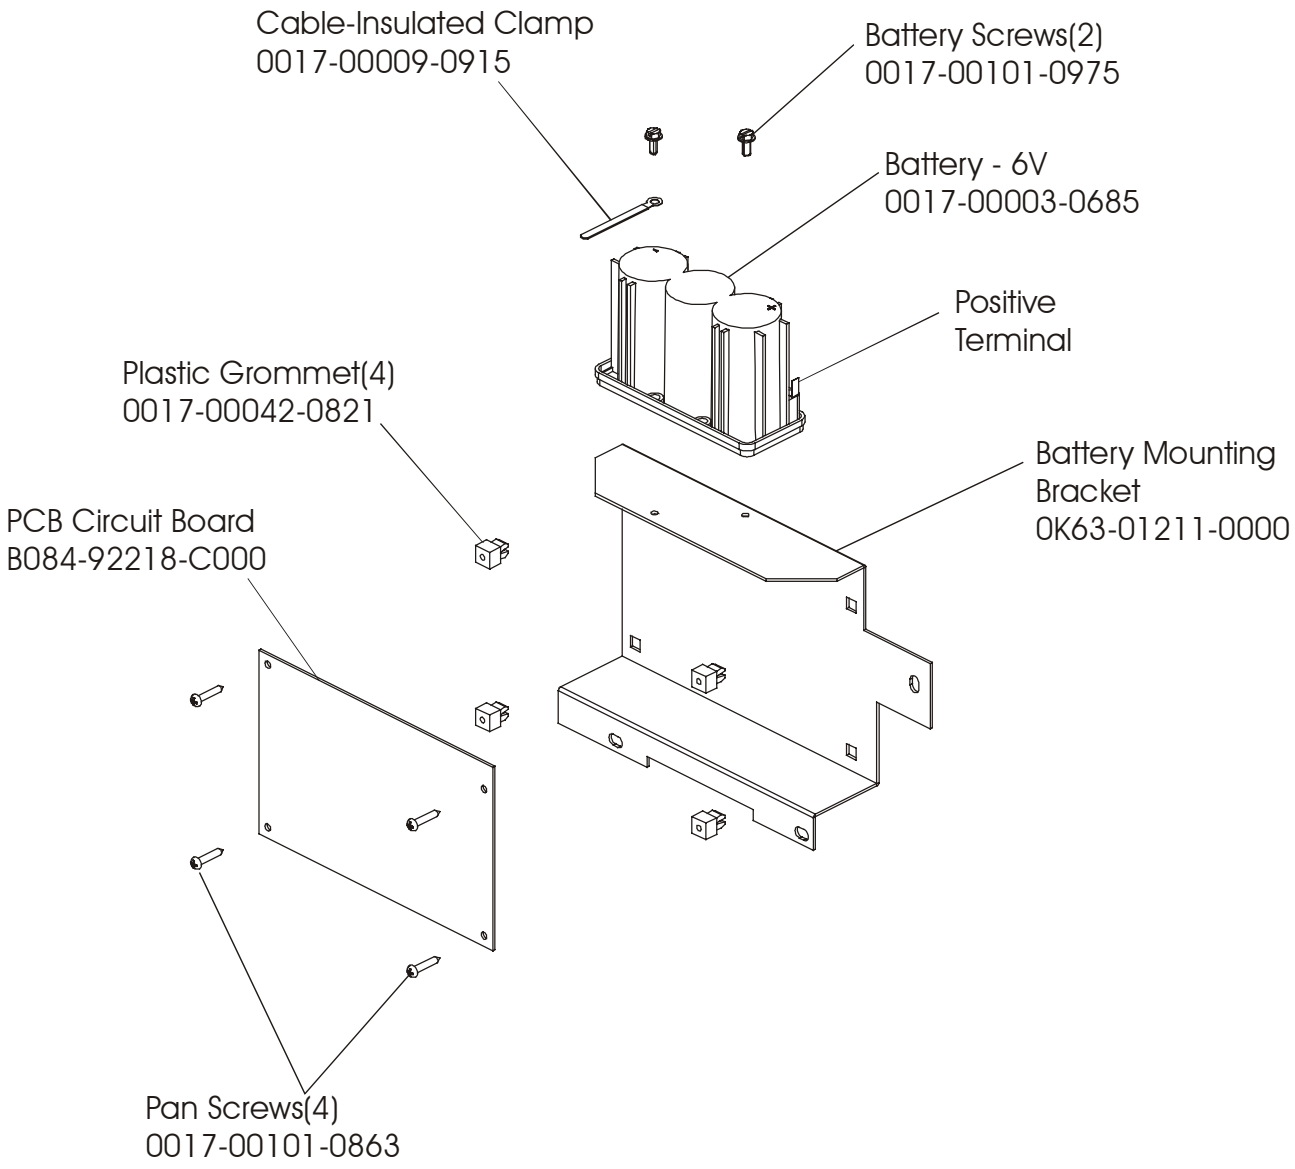
Cable-Insulated Clamp
0017-00009-0915
Battery Screws(2)
0017-00101-0975
Battery - 6V
0017-00003-0685
Positive
Terminal
Plastic Grommet(4)
0017-00042-0821
Battery Mounting
Bracket
0K63-01211-0000
PCB Circuit Board
B084-92218-C000
Pan Screws(4)
0017-00101-0863

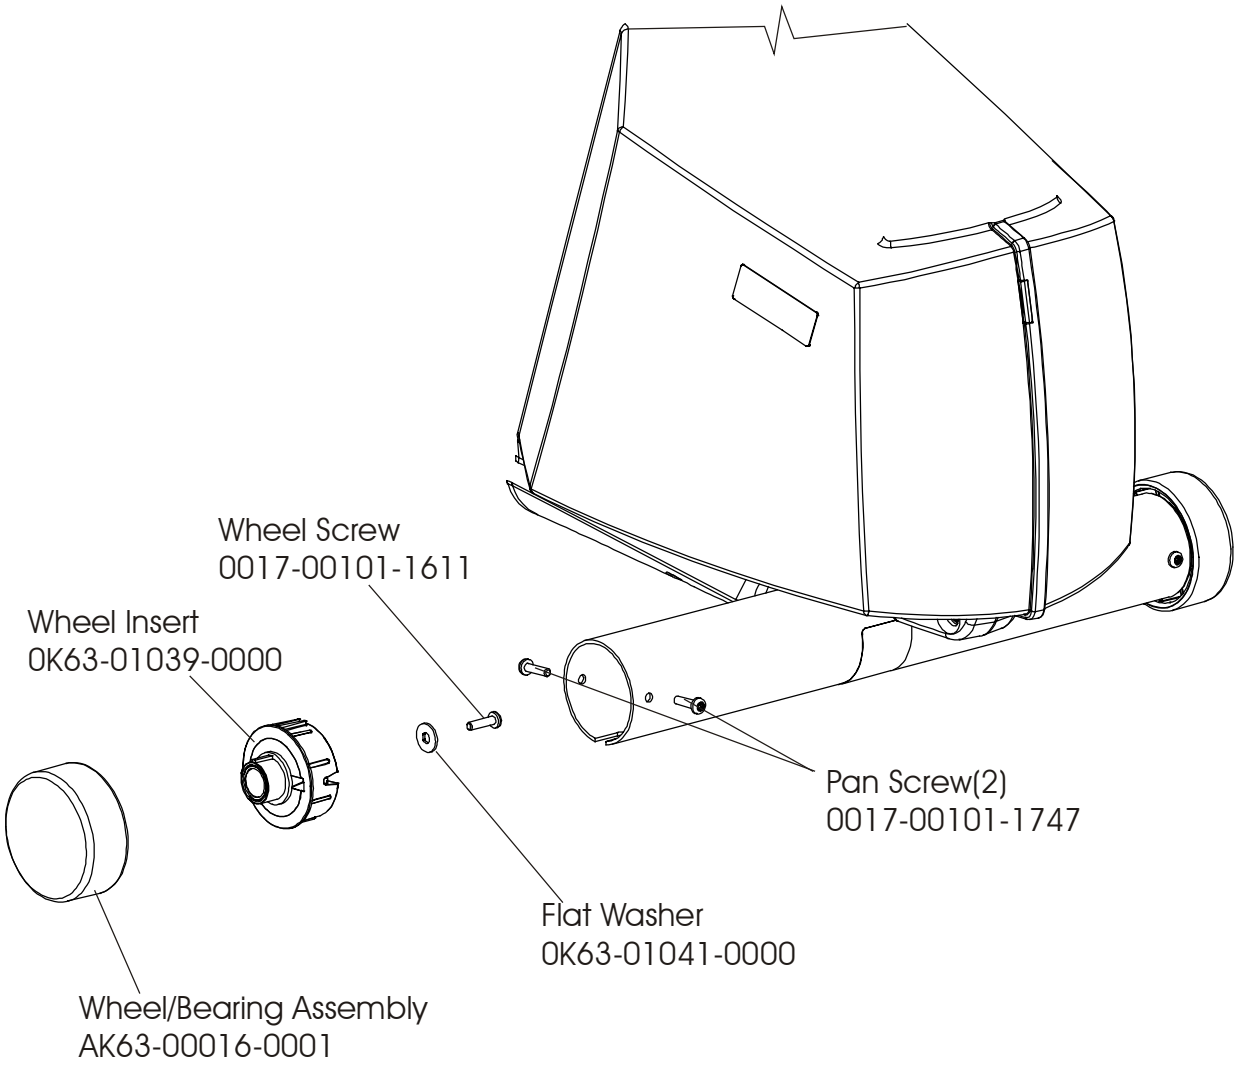
Wheel Screw
0017-00101-1611
Wheel Insert
0K63-01039-0000
Pan Screw(2)
0017-00101-1747
Flat Washer
0K63-01041-0000
Wheel/Bearing Assembly
AK63-00016-0001

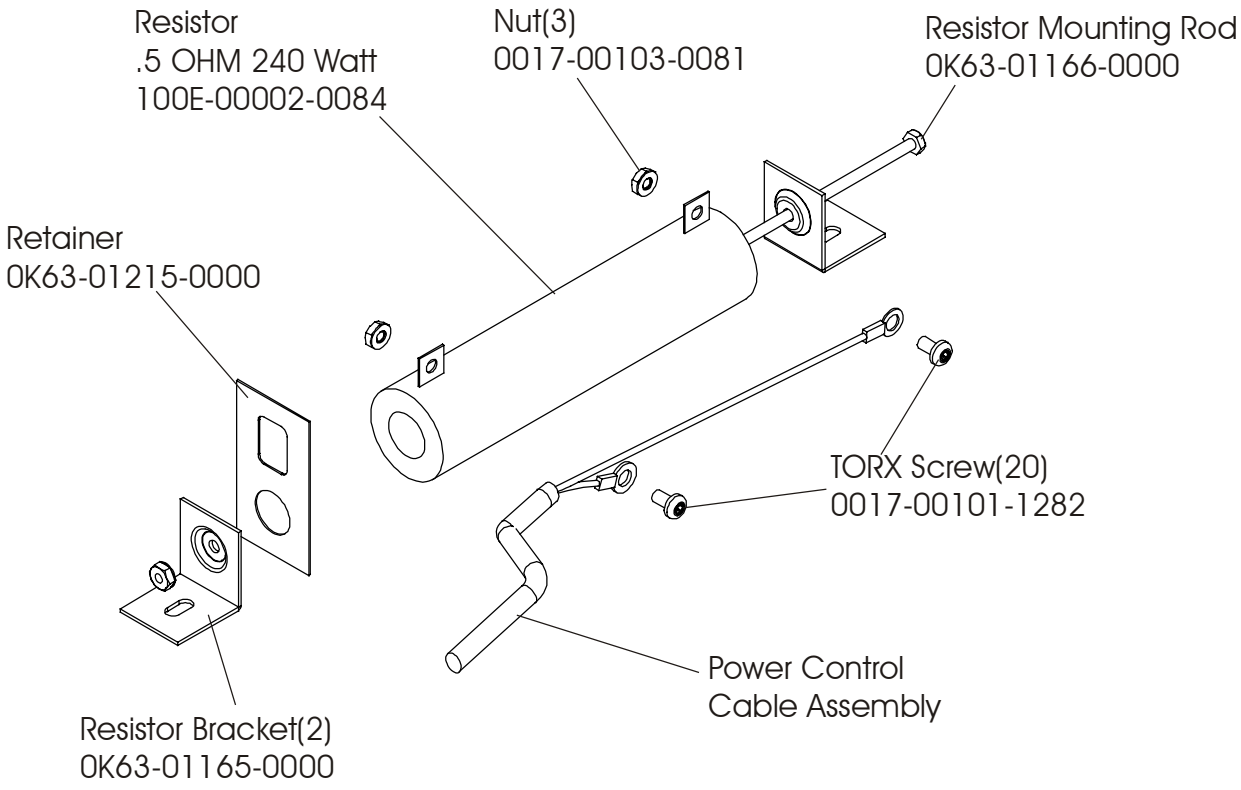
Resistor
.5 OHM 240 Watt
100E-00002-0084
Nut(3)
0017-00103-0081
Resistor Mounting Rod
0K63-01166-0000
Retainer
0K63-01215-0000
TORX Screw(20)
0017-00101-1282
Power Control
Cable Assembly
Resistor Bracket(2)
0K63-01165-0000

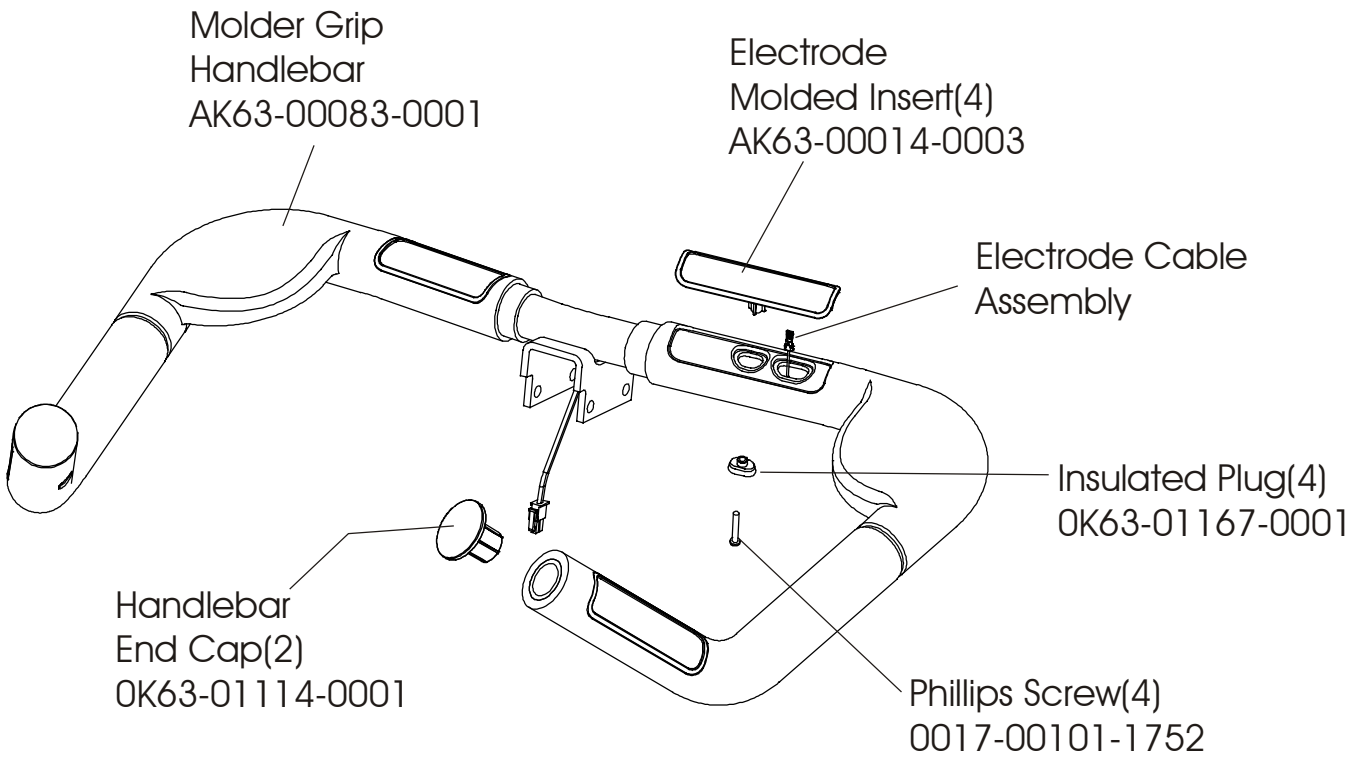
Molder Grip
Handlebar
AK63-00083-0001
Electrode
Molded Insert(4)
AK63-00014-0003
Electrode Cable
Assembly
Insulated Plug(4)
0K63-01167-0001
Handlebar
End Cap(2)
0K63-01114-0001
Phillips Screw(4)
0017-00101-1752

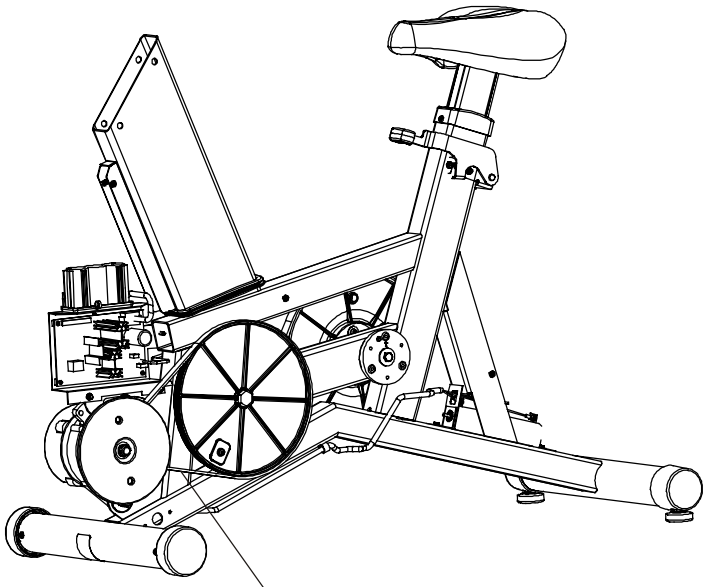

Alternator Belt
0K63-01065-0000

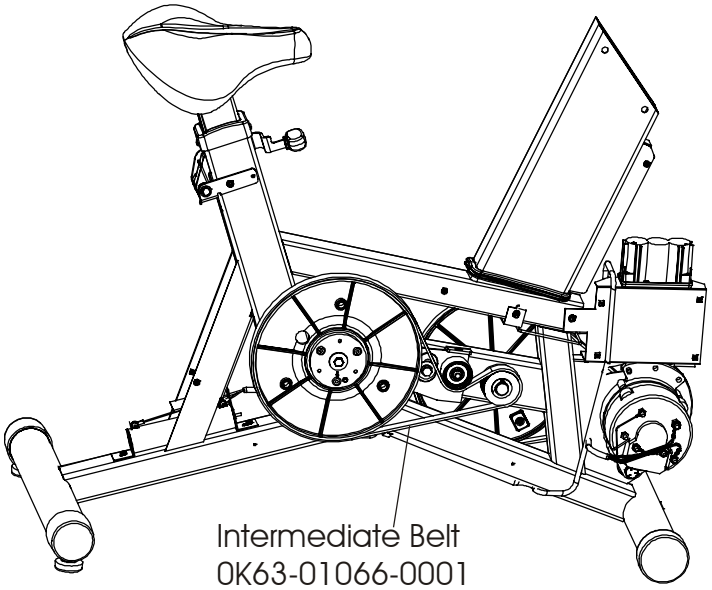

Intermediate Belt
0K63-01066-0001

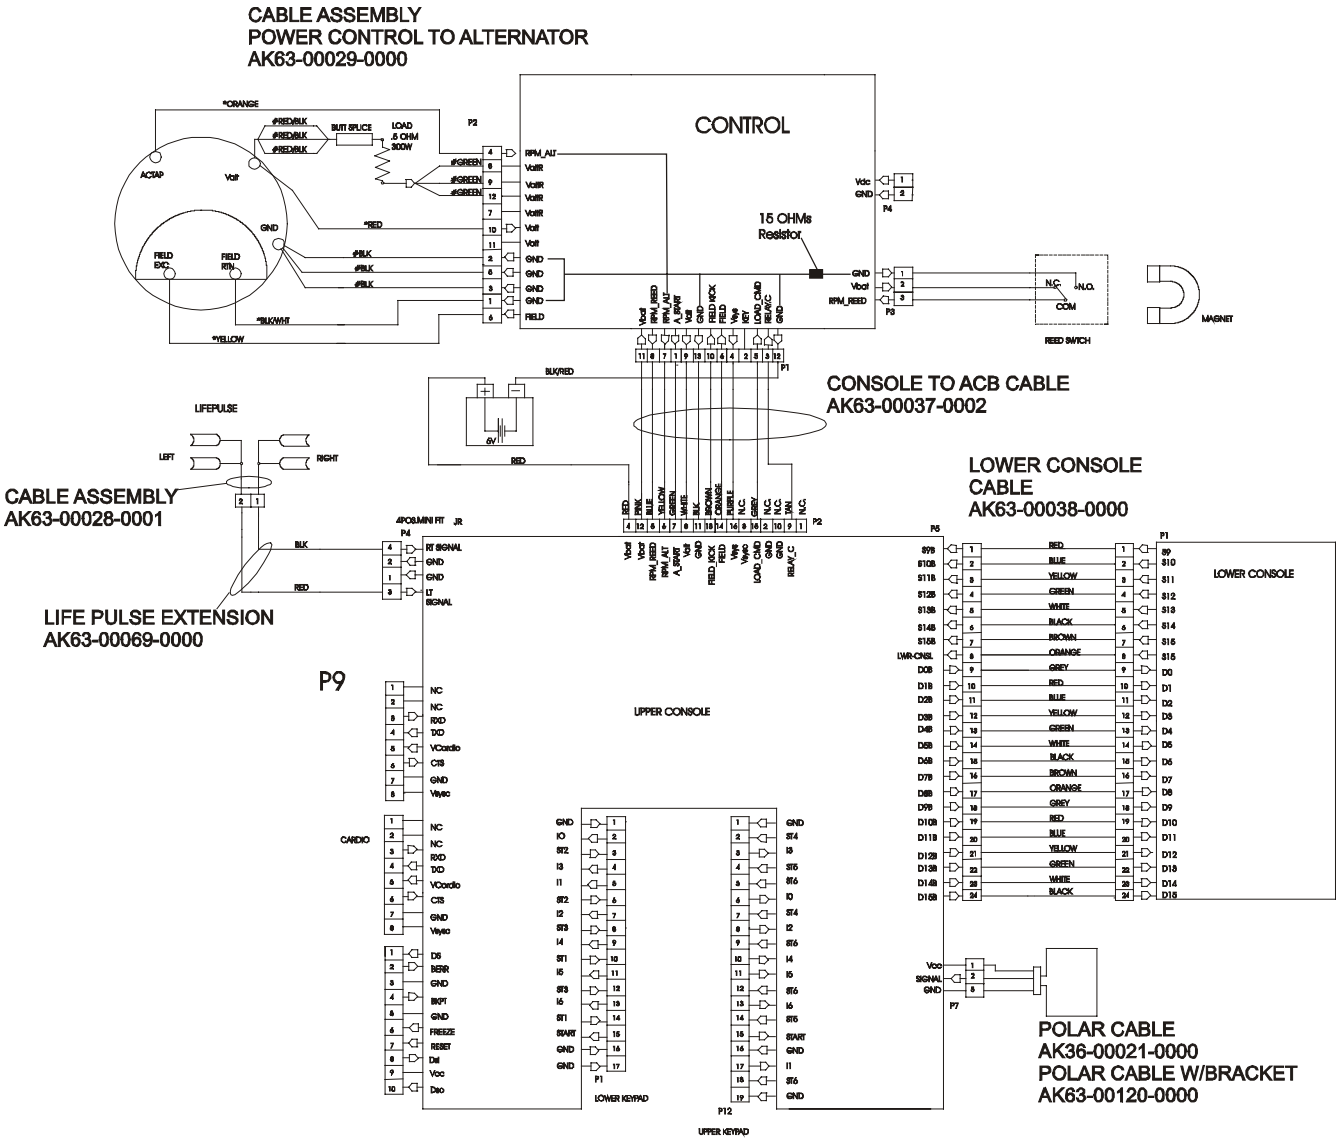
CABLE ASSEMBLY
POWER CONTROL TO ALTERNATOR
AK63-00029-0000
CONTROL
15 OHMs
Resistor
CONSOLE TO ACB CABLE
AK63-00037-0002
LOWER CONSOLE
CABLE
AK63-00038-0000
CABLE ASSEMBLY
AK63-00028-0001
LIFE PULSE EXTENSION
AK63-00069-0000
P9
UPPER CONSOLE
LOWER CONSOLE
POLAR CABLE
AK36-00021-0000
POLAR CABLE W/BRACKET
AK63-00120-0000
LOWER KEYPAD
UPPER KEYPAD
REED SWITCH
MAGNET